



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	22	805059	ELBOW	1		
2		815425T	SENDER-OIL PRESSURE	1		
2		37293T	SENDER-OIL PRESSURE	1	OPT	(DUAL STATION)
3		97257A 1	SENDER-WATER TEMPERATUR	1		
3		49734	SENDER-WATER TEMPERATUR	1	OPT	(DUAL STATION)
4	13	26996	LOCKWASHER (#10)	2		
5	11	68219	NUT (#10-32)	2		
6	87	805605A 1	SWITCH-PRESSURE	1		AUDIO WARNING SYSTEM
7	13	26996	LOCKWASHER (#10)	1		AUDIO WARNING SYSTEM
8	11	68219	NUT (#10-32)	1		AUDIO WARNING SYSTEM
9		816492A 6	ALARM INSTALLATION KIT	1		AUDIO WARNING SYSTEM
10	22	805059	BUSHING-REDUCER	1		
11		805218T	SENSOR-COOLANT TEMPERATL	1		
12	22	806705 1	Y-FITTING	1		
13		808015T	SENSOR-ESC CONTROL	1		
14		805592A 1	CONNECTOR	1		(BRAVO)
15		830796A 1	CONNECTOR	1		
16		805368T	BRACKET-ELECTRICAL	1		
17	88	806950	BREAKER-CIRCUIT (50 AMP)	1		
18	10	68513	SCREW (#10-32 X 3/8 IN.)	2		
19	13	26996	LOCKWASHER (#10)	2		
20	10	57583	SCREW (#8-32 X 3/8 IN.)	2		
21	89	96158T	SOLENOID-STARTER	1		
22	13	26995	LOCKWASHER (#8)	2		
23	11	26419	NUT (#8-32)	2		
24	10	805564	SCREW (1/4-20)	2		(ALPHA)
25	16	805459	STUD-MERCATHODE MOUNTINC	1		(BRAVO)
26	13	26992	LOCKWASHER (1/4 IN.)	2		
27	11	94330	NUT (1/4-20)	2		
28	85	97861	INSULATOR-STARTER SOLENOI	1		
29		807057T	RELAY	2		23
30		805223T	SENSOR-MAT	1		