



19761

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		47754A 9	TRANSMISSION ASSEMBLY	1	
2	22	47629	FITTING, Elbow (90 Degree), TR.	1	
3	23	36159	BUSHING, REDUCER - TRANSMISSION	1	
3	22	64970	FITTING, EXTENSION	1	
4	22	47631	ELBOW, TRANSMISSION TO OIL COOLER	1	
5		57758A 2	ENGINE COUPLING ASSEMBLY	1	
6	19	47463	PLUG, EXPANSION - ENGINE	1	
7	30	47470	BALL BEARING, ENGINE COUPLING	1	
8	53	47469	RING, SNAP - BALL BEARING	1	
9		98322A 2	TAILSTOCK ASSEMBLY, BEARING	1	
10		35852	MOUNT, RUBBER - TAILSTOCK	2	
11	26	47465	OIL SEAL, TAILSTOCK	1	
12	30	57762	BALL BEARING, TAILSTOCK	1	
13	30	32537	BALL BEARING, TAILSTOCK	1	
14	53	54481	RING, SNAP - BALL BEARING	1	
15	25	54067	SEAL, TAILSTOCK	1	
16	27	47903	GASKET, TAILSTOCK	1	
17	10	29081	SCREW, (0.437-14 x 1.25), TAILSTOCK	4	
17	10	54847	SCRW, TAILSTOCK TO TRANSMISSION	2	
17	10	47462	SCREW, (.437-14 x 1.250), TAILSTOCK	2	
18	13	30381	LOCKWASHER, TAILSTOCK SCREW	6	
18	13	32993	LOCKWASHER, (.437), TAILSTOCK	2	
19	32	47516 2	HOSE, TRANSMISSION TO OIL COOLER	1	
20	22	47630	ELBOW, (90 Degree), TRANSMISSION	1	
21		47472	LEVER, SHIFT - TRANSMISSION	1	
22	12	20722	WASHER, (.328 x .625 x .060), SHIFT LEVER	1	
23	13	26993	LOCKWASHER, (.312), SHIFT LEVER	1	
24	11	20083	NUT, SHIFT LEVER TO TRANSMISSION	1	
25	10	60179	SCREW, (.437-14 x 3.500), TRANSMISSION	6	
26	13	32993	LOCKWASHER, (.437), TRANSMISSION	6	
27	32	47516 3	HOSE, TRANSMISSION TO OIL COOLER	1	
28	22	47630	ELBOW, (90 Degree), HOSE TO OIL COOLER	1	
29		93662	BRACKET ASSEMBLY, TRANSMISSION	1	(STARBOARD)
29		93664	BRACKET ASSEMBLY, TRANSMISSION	1	(PORT)
31	10	47462	SCREW, (.437-14 x 1.250), MOUNTING	4	
32	13	32993	LOCKWASHER, (.437), MOUNTING	4	
33		47335A 1	BRACKET ASSEMBLY, SHIFT SUPPORT	1	
34	16	72809	STUD, (.250-20/.250-28 x 1.620)	1	
35	12	21631	WASHER, (.255 x .625 x .0312), SHIFT LEVER	2	
36	23	31866	SPACER, (.26 x .31 x .64), SHIFT LEVER	1	
37	11	20586	NUT, (.250-20) SHIFT SUPPORT	1	