



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		71527A 8	EXHAUST MANIFOLD ASSEMBLY	1		
2	22	33198	PLUG, CORE (3/4-14)	3		
3	22	36382	PLUG, DRAIN (1/4-18NPT)	1		
4	16	49545	STUD, EXHAUST MANIFOLD TO	4		
5	16	71494	STUD, EXHAUST MANIFOLD TO	1		
5	16	77958	STUD, EXHAUST MANIFOLD TO	1		
6	10	36355	SCREW, EXHAUST MANIFOLD TI	6		
7	13	35048	LOCKWASHER, EXHAUST MANIF	8		
8	11	32219	NUT, EXHAUST MANIFOLD ATTA	2		
9	27	68715	GASKET, EXHAUST MANIFOLD T	1		2
10		71943	END CAP, REAR	1		
11	27	48043	GASKET, END CAP	1		2
12	10	24234	SCREW, END CAP TO EXHAUST	3		
13	10	20362	SCREW, END CAP TO EXHAUST	1		
14	22	75188	FITTING, END CAP-BY-PASS HOE	1		
15		74009	THERMOSTATE HOUSING	1		
16	22	32803	PLUG, THERMOSTAT HOUSING	1		
17		75669	SENDER, WATER TEMPERATURF	1		
18	27	48043	GASKET, THERMOSTAT HOUSIN	1		2
19	10	74822	SCREW, THERMOSTAT HOUSIN	4		
20	12	36533	WASHER, COPPER - THERMOST	4		
21		76270	THERMOSTAT	1		
22	27	74830	GASKET, THERMOSTAT HOUSIN	1		2
23		74144	RESERVOIR	1		
24	10	74826	SCREW, RESERVOIR TO THERM	2		
25	10	53016	SCREW, RESERVOIR TO THERM	2		
26	13	39107	LOCKWASHER, RESERVOIR ATT	4		
27	12	53705	WASHER, RESERVOIR ATTACHI	4		
28	25	45257	"O" RING, FILLER BASE	1		2
28	25	45257	"O" RING, FILLER BASE	1		
29	22	58471	BASE, FILLER HOLE	1		
30	27	71614	GASKET, FILLER HOLE CAP	1		
31	36	55143	CAP, FILLER HOLE	1		
32	22	74033	ELBWO, OVERFLOW	1		
33	22	76170	FITTING, RESERVOIR BY-PASS	1		
34	54	64235	CLAMP, HOSE TO VALVE COVER	1		
35	32	75182	HOSE, BY-PASS-RESERVOIR TO	1		
36	54	75826	CLAMP, BY-PASS HOSE ATTACH	2		
37		60426A	EXHAUST ELBOW ASSEMBLY	1	SERIAL 00000000-04625579	
37		76325A	EXHAUST ELBOW ASSEMBLY	1	SERIAL 04625580-09999999	
38	22	33198	PLUG, CORE (3/4-14 NPT)	4		