



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		65535A 4	BELL HOUSING ASSEMBLY	1		
2	27	64818	GASKET, DRIVE SHAFT HSG. T	1		
3	22	33066	CONNECTOR, WATER HOSE T	1		
5	10	25612	SCREW, DRIVE - BELL HOUSIN	4		
6		63679	BUMPER, BELL HOUSING	1		
7	23	35088	BUSHING, BELL HOUSING (5/8	1		
8	26	45587	OIL SEAL, BELL HOUSING	1		
9	23	45588	BUSHING, BELL HOUSING (5/1	1		
10	27	39582	GASKET, RUBBER - BELL HOU:	1		
11	25	33504	"O" RING, BELL HOUSING	1		
12	12	72498	WASHER, SYNTHANE - BELL H	2		
13	16	59579	STUD, BELL HOUSING TO DRIV	6		
14	12	35935	WASHER, BELL HOUSING STUD	6		
15	11	34933	NUT, BELL HOUSING STUD	6		
16		60932A 1	BELLOWS ASSEMBLY, UNIVERS.	1		
17	54	31765	CLAMP, BELLOWS TO BELL HSG	2		
18	32	47642	HOSE, WATER - BELL HOUSING	1		
19	54	32523	CLAMP, WATER HOSE ATTACHM	2		
20		32734	BELLOWS, EXHAUST - BELL HOL	1		
21	54	32533	CLAMP, EXHAUST BELLOWS TO	2		
22		45589A 1	SHAFT ASSEMBLY, SHIFT - UPPE	1		
23		62104	SHAFT, SHIFT - INTERMEDIATE	1		
24	18	32665	COTTER PIN, INTERMEDIATE SF	1		
25	12	32666	WASHER, INTERMEDIATE SHIFT	1		
26		45518A 1	LEVER ASSEMBLY, UPPER SHIF	1		
27	12	39116	WASHER, UPPER SHIFT LEVER	1		
28	10	45590	SCREW, UPPER SHIFT LEVER TI	1		