



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1547	5523A18	DRIVE SHAFT HOUSING ASSEMBLY	1	
2	16	56295	STUD, DRIVE SHAFT HOUSING	2	
3	22	31704	PLUG, PIPE - DRIVE SHAFT HO	1	
4	19	32652	WELCH PLUG, DRIVE SHAFT H	1	
5	23	32632	BUSHING, DRIVE SHAFT HOUS	1	
6	11	34933	NUT, GEAR HOUSING TO DRIVE	3	
7		54235A 2	COVER ASSEMBLY, WATER POC	1	
8	26	36557	SEAL, RUBBER - WATER POC	1	
9	27	55810	GASKET, WATER POCKET COV	1	
10	10	28668	SCREW, WATER POCKET COV	4	
11	32	54236	TUBE, WATER - WATER POC	1	
12	19	32298	PLUG, TRIM TAB HOLE - DRIVE	1	
--	37	75278A 1	DECAL SET, DRIVE SHAFT HOUS	1	
14	10	28634	SCREW, DRIVE SHAFT HOUSING	1	
15	12	20260	WASHER, DRIVE SHAFT HOUSIN	1	
16	26	37259	OIL SEAL, DRIVE SHAFT HOUS	1	
17	26	32511	OIL SEAL, GEAR CHAMBER - DRI	1	
18	15	36178A 1	SHIM, BEARING CUP TO DRIVE S	AR	
19	31	35990A 1	TAPERED ROLLER BEARING AS	1	
20	43	75324A 2	GEAR ASSEMBLY, COMPLETE - F	1	
21	45	55796	DRIVE SHAFT, UPPER	1	
22	25	55801	"O" RING, UPPER DRIVE SHAFT	1	
23		76098A 1	COVER ASSEMBLY, TOP - DRIVE	1	
24	31	61100A 1	BEARING ASSEMBLY, DRIVE S	1	
26	15	45691A 1	SHIM, BEARING CUP TO TOP C	AR	
27	25	32546	"O" RING, TOP COVER SEALING	1	
28	10	58640	SCREW, TOP COVER TO DRIVE	4	
29		58858A 1	UNIVERSAL JOINT ASSEMBLY, C	1	
30		46020	YOKE, UNIVERSAL JOINT - GEZ	1	
31		39383	SOCKET, CENTER - UNIVERSA	1	
32		75832	CROSS AND BEARING ASSEMBE	2	
33		39385A 1	YOKE ASSEMBLY, UNIVERSAL	1	
34	25	25439	"O" RING, UNIVERSAL JOINT	2	
35		66071	RETAINER, TAPERED ROLLER B	1	
36		35983	RING, ROLLER BEARING RETAIN	1	
37	25	70937	"O" RING, OIL SEAL CARRIER	1	
38		66081A 2	CARRIER ASSEMBLY, OIL SEAL	1	
39	26	68493	OIL SEAL, CARRIER	1	
40	31	35988A 2	TAPERED ROLLER BEARING AS	1	
41	23	35385	SPACER, DRIVE GEAR ROLLEF	1	
42	15	35990A 1	SHIM, BEARING CUP TO DRIVE S	AR	