



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		70861A 1	GIMBAL HOUSING ASSEMBLY	1		
2	16	56296	STUD, GIMBAL HOUSING TO T	2		
3	31	32536	BEARING, ROLLER - GIMBAL H	1		
4	26	32911	OIL SEAL, LOWER GIMBAL HO	2		
5	31	21145	ROLLER BEARING, GIMBAL HO	1		
6	26	54925	OIL SEAL, UPPER GIMBAL HOL	1		
8	22	31345	FITTING, GREASE - GIMBAL HC	2		
9		29359	LUBRICAP, GIMBAL HOUSING	2		
15	30	60794A 2	BEARING ASSEMBLY, GIMBAL	1		
16		61075	TOLERANCE RING, GIMBAL HC	1		
17	10	25612	SCREW, DRIVE - GIMBAL HOUS	4		
18	25	20863	"O" RING, GIMBAL HOUSING	1		
19	16	56766	STUD, HYDRAULIC CONNECTO	2		
--		63720	EMBLEM, GIMBAL HOUSING	1		
20	17	45212	PIN, SWIVEL - GIMBAL HOUSING	1		
21	18	34212	COTTER PIN, RETAINING - LOWE	1		
22	12	32518	WASHER, GIMBAL HOUSING TO	1		
23		55989A 1	BOLT ASSEMBLY, ANODIC - GIME	2		
24		55989	ANODIC HEAD, BOLT ASSEMBL	2		
25	12	56085	WASHER, ANODIC BOLT ASSE	2		
26	12	32620	WASHER, GIMBAL HOUSING BOI	2		
27		74639	BELLOWS, SHIFT ACTUATING CA	1		
28	54	38863	CLAMP, ACTUATING CABLE BELL	1		
29	54	31766	CLAMP, SHIFT ACTUATING CABL	1		
30	12	34567	WASHER, GIMBAL HOUSING STI	2		
31	11	34933	NUT, GIMBAL HOUSING STUD	2		
32	32	32631	TUBE, WATER - GIMBAL HOUSIN	1		
33	23	28055	BUSHING, RUBBER - WATER TU	1		
34		32517	COVER, WATER TUBE SEALING	1		
35	10	28635	SCREW, WATER TUBE SEALING	2		
36		72082A 2	ELBOW ASSEMBLY, EXHAUST	1		
37		72264A 1	BRACKET, SUPPORT - WATER	2		
38	10	45813	SCREW, SUPPORT BRACKET	4		
39	11	45812	NUT, SUPPORT BRACKET SCR	4		
40	10	35787	SCREW, EXHAUST ELBOW TO G	3		
41	13	35048	LOCKWASHER, EXHAUST ELBOV	3		
42		65533	SEAL, GIMBAL HOUSING TO TRA	1		
43		45586	SHUTTER, WATER - EXHAUST E	1		
44		70981	BELLOWS, EXHAUST ELBOW TC	1		
45	54	31765	CLAMP, BELLOWS ATTACHING (I	2		
45	54	32682	CLAMP, BELLOWS ATTACHING (I	2		