



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	456	6092A 1	CRANKSHAFT	1		
2		68700A 1	SPROCKET, CRANKSHAFT	1		
3	28	67382	KEY, SPROCKET AND ALTERNA	2		
4	398	6231A10	STATOR ASSEMBLY, ALTERNAT	1		
5	10	77363	SCREW, STATOR TO FRONT CO	5		
6	13	26993	LOCKWASHER, STATOR SCREW	5		
7		93009A 5	ALTERNATOR ASSEMBLY, FLYw	1		
8	10	59644	SCREW, ALTERNATOR (1-3/8")	1		
9	12	36103	WASHER, ALTERNATOR SCREW	1		
10	251	8468A 2	FLYWHEEL	1		
11	10	49845	SCREW, FLYWHEEL TO CRANKS	6		
12	13	39131	LOCKWASHER, FLYWHEEL SCR	6		
13		97432A 2	COUPLING ASSEMBLY, ENGINE	1		
14	10	37612	SCREW, COUPLING TO FLYWHE	6		
15	13	35048	LOCKWASHER, COUPLING SCRE	6		
16	10	74335	SCREW, MAIN BEARING CAPS	10		
17	26	98421A 1	SEAL, REAR BEARING CAP	1		
18			MAIN BEARING ASSY (STD.)	4	WHEN ORDERING REPLACEME	
18		74313A 2	MAIN BEARING ASSY (.002 U.S.)	AR	WHEN ORDERING REPLACEME	
18		74313A 4	MAIN BEARING ASSY (.010 U.S.)	AR	WHEN ORDERING REPLACEME	
18		74313A 3	MAIN BEARING ASSY (.020 U.S.)	AR	WHEN ORDERING REPLACEME	
19		74314A 1	CENTER MAIN BRG. ASSY (STD.)	1	WHEN ORDERING REPLACEME	
19		74314A 2	CENTER MAIN BRG. ASSY (.002	AR	WHEN ORDERING REPLACEME	
19		74314A 4	CENTER MAIN BRG. ASSY (.010	AR	WHEN ORDERING REPLACEME	
19		74314A 3	CENTER MAIN BRG. ASSY (.020	AR	WHEN ORDERING REPLACEME	