



19854

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	93947A	WIRING HARNESS	1		
2		26079A	PLATE KIT, Wire Harness Mount	1	(METAL)	
2		26079A	PLATE KIT, Wire Harness Mount	1	(PLASTIC)	
3	10	34696	SCREW, (.8-32 x 0.75), WIRING HARNESS	4	(METAL)	
3	10	15001	SCREW, (#8-16 x .875), PLATE	4	(PLASTIC)	
4		98493A	BRACKET, MOUNTING	1		
5	10	54615	SCREW, (.250-20 x .625), MOUNTING	3		
6	13	26992	LOCKWASHER, (.250), MOUNTING	3		
7		15899A	IGNITION AMPLIFIER (w/HARNESS)	1		
7		814295A	IGNITION MODULE ASSEMBLY (W/IGNITION)	1		
8	10	69093	SCREW, (.25-20 X 1.50), IGNITION	3		
9	13	26992	LOCKWASHER, (.250), IGNITION	3		
10	23	92152	SPACER, IGNITION AMPLIFIER	3		
11		97257A	SENDER ASSEMBLY, Water Temp	1		
11		97258A	SENDER (1/2-14)	1		
11		49734A	SENDER ASSEMBLY, Water Temp	1		
12	13	26996	LOCKWASHER, (#10), WATER	1		
13	11	68219	NUT, (#10-32), WATER TEMPERATURE	1		
14		90806	SENDER	1		
14		37293	SENDER ASSEMBLY, Oil Pressure	1		
15	13	26996	LOCKWASHER, (#10), OIL PRESSURE	1		
16	11	68219	NUT, (#10-32), OIL PRESSURE	1		
17	22	46932	ELBOW, OIL PRESSURE SENDER	1		
18	22	42554	NIPPLE, OIL PRESSURE SENDER	1		
19		41170T	MOUNTING BRACKET, MOUNTING	1		
20	10	98260	SCREW, (.375-16 x .620), MOUNTING	1		
20	10	37612	SCREW, (.375-16 x 1.250), MOUNTING	1		
21	13	35048	LOCKWASHER, (.375), MOUNTING	1		
22	23	91034	SPACER, (.380 x 1.00 x .530), MOL	2		
23	10	35787	SCREW, (.375-16 x 2.250), MOUNTING	1		
24	16	24585	STUD, MOUNTING BRACKET (STUD)	1		
25	11	24883	NUT, MOUNTING BRACKET (STUD)	1		
26	13	35048	LOCKWASHER, (.375), MOUNTING	1		
27	12	20086	WASHER, MOUNTING BRACKET	1		
28	23	15895	SPACER, (.38 X 1.00 X 1.44), MOL	1		
29	88	11178	BREAKER, Circuit (50 AMP)	1		
30	13	26996	LOCKWASHER, (#10), CIRCUIT BREAKER	2		
31	11	27164	NUT AND LOCKWASHER, (#10-3-)	2		
32	10	45862	SCREW, (#10-32 x .875), CIRCUIT BREAKER	2		
33	10	71405	SCREW, (#10-32 X .44), INSULATOR	1		
34	12	20164	WASHER, (.192 x .375 x .021) CIRCUIT	2		