


Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	807700A 2	WIRING HARNESS (EFI)	1		

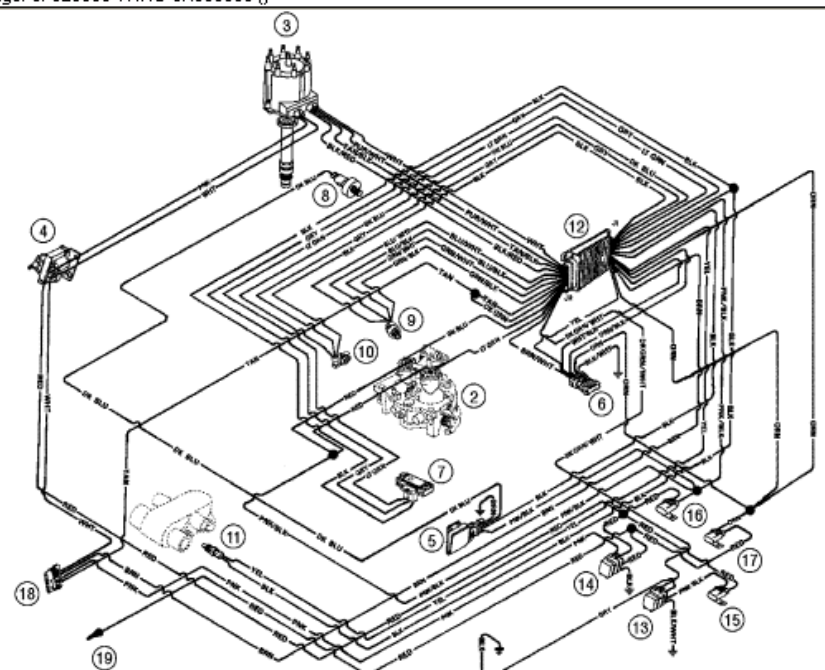

1. FUEL PUMP
2. THROTTLE BODY
3. DISTRIBUTOR
4. COIL
5. ELECTRONIC SPARK CONTROL (KS) MODULE
6. DATA LINK CONNECTOR (DLC)
7. MANIFOLD ABSOLUTE PRESS. (MAP) SENSOR
8. KNOCK SENSOR
9. IDLE AIR CONTROL (IAC)
10. THROTTLE POSITION (TP) SENSOR
11. ENGINE COOLANT TEMP. (ECT) SENSOR
12. ELECTRONIC CONTROL MODULE (ECM)
13. FUEL PUMP RELAY
14. IGNITION/SYSTEM RELAY
15. FUSE (15 AMP) FUEL PUMP
16. FUSE (15 AMP) ECM/DLC/BATTERY
17. FUSE (10 AMP) ECM/IGNITION/KNOCK MOD.
18. HARNESS CONNECTOR
19. POSITIVE (+) WIRE TO CIRCUIT BREAKER