



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
	1623	4110A 6	GEAR HOUSING ASSEMBLY, COI	1	B-1623-4110A6, A13 AND B-1623	
	1623	4110A13	GEAR HOUSING ASSEMBLY, COI	1	SERIAL 03784375-03909577	
	1623	5356A 3	GEAR HOUSING ASSEMBLY, COI	1	SERIAL 03909578-09999999	
1	1623	4110A 3	GEAR HOUSING ASSEMBLY	1	SERIAL 00000000-03909577	
1	1623	5356A 4	GEAR HOUSING ASSEMBLY	1	SERIAL 03909578-09999999	
2	17	37972	PIN, SHIFT CRANK - GEAR HC	1		
3	16	46911	STUD, GEAR HOUSING TO D	1		
4	16	56298	STUD, GEAR HOUSING TO D	2		
5	26	45577	SEAL, GEAR HOUSING	1		
6	16	56297	STUD, WATER PUMP BASE A	1		
7	16	69501	STUD, WATER PUMP BASE A	2		
8	17	46912	PIN, DOWLE - GEAR HOUSING	2		
9	31	35934	BEARING, ROLLER - DRIVE S	1		
10		66884	INSERT, WATER PICKUP (ST.	1	SERIAL 03909578-09999999	
10		66885	INSERT, WATER PICKUP (ST.	1	SERIAL 03909578-09999999	
11	10	76156	SCREW, INSERT TO GEAR H	1	SERIAL 03909578-09999999	
12	11	45812	NUT, INSERT SCREW	1	SERIAL 03909578-09999999	
13	45	55757A 1	DRIVE SHAFT ASSEMBLY	1		
14	17	30545	PIN, DRIVE SHAFT	1		
15	24	34576	SPRING, COMPRESSION - DF	1		
16	25	30613	"O" RING, UPPER - DRIVE SHA	1		
17	43	61027	GEAR, PINION - DRIVE SHAFT	1		
18	11	35921	NUT, PINION GEAR TO DRIVE S	1		
19	15	57007A 1	SHIM, DRIVE SHAFT BEARING	AP		
20	31	53079A 1	TAPERED ROLLER BEARING A	1		
21	27	33146	GASKET, WATER PUMP BASE	1		
22	25	33145	"O" RING, WATER PUMP BASE	1		
23	46	57234A 1	WATER PUMP BASE ASSEMBL	1		
24	26	33144	OIL SEAL, WATER PUMP BAS	1		
25	26	31507	OIL SEAL, WATER PUMP BAS	1		
26	17	35973	DOWEL PIN, WATER PUMP E	2		
27	27	32433	GASKET, LOWER - WATER PUI	1		
28		32435	PLATE, FACE - WATER PUMP E	1		
29	27	32434	GASKET, UPPER - FACE PLATE	1		
30	46	48743A 1	WATER PUMP BODY ASSEMBL	1	SERIAL 00000000-03784374	
30	46	64141A 1	WATER PUMP BODY ASSEMBL	1	SERIAL 03784375-09999999	
31		48752	INSERT, WATER PUMP BOD	1		
32	26	31507	OIL SEAL, WATER PUMP BOI	1		
33	26	38970	SEAL, RUBBER - WATER INLI	1		
34	47	65960	IMPELLER, WATER PUMP	1		
35	28	66664	PIN, IMPELLER DRIVE	1		