



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1567	3152A	DRIVE SHAFT HOUSING ASSEMBLY	1	SERIAL 00000000-30010963	
2	1567	3152A37	DRIVE SHAFT HOUSING ASSEMBLY	1	SERIAL 30010964-09999999	
3	16	57985	STUD, DRIVE SHAFT HOUSING	6		
4	26	38105	OIL SEAL, DRIVE SHAFT HOUSING	1		
5	16	57932	STUD, DRIVE SHAFT HOUSING	7	SERIAL 00000000-03001963	
6	10	58642	SCREW, FRONT COVER TO DRIVE SHAFT HOUSING	7	SERIAL 03001964-09999999	
7	13	58643	LOCKWASHER, FRONT COVER TO DRIVE SHAFT HOUSING	7	SERIAL 03001964-09999999	
7	16	57984	STUD, DRIVE SHAFT HOUSING	2		
7	16	57983	STUD, DRIVE SHAFT HOUSING	2		
8	10	28634	SCREW, VENT - DRIVE SHAFT HOUSING	1		
9	12	20260	WASHER, SEAL - VENT SCREW	1		
10	37	39428A	DECAL SET, DRIVE SHAFT HOUSING	1	SERIAL 00000000-27610141	
10	37	56036A	DECAL SET, DRIVE SHAFT HOUSING	1	SERIAL 02761142-03001963	
10	37	56036A 2	DECAL SET, DRIVE SHAFT HOUSING	1	SERIAL 03001964-09999999	
11	19	47579	PLUG, TRIM TAB HOLE - DRIVE SHAFT HOUSING	1		
12	43	47309A	GEAR ASSEMBLY, COMPLETE (1)	1		
12	43	47237A	GEAR ASSEMBLY, COMPLETE (2)	1		
13	15	34800A	SHIM ASSY, ROLLER BEARING	1		
14	31	34804A	TAPERED ROLLER BEARING ASSEMBLY	1		
15	23	47285	SPACER, TAPERED ROLLER BEARING	1		
16	12	47451	WASHER, TAPERED ROLLER BEARING	1		
17	11	47449	NUT, TAPERED ROLLER BEARING	1		
18	25	47288	"O" RING, TAPERED ROLLER BEARING	1		
19		47303	ADAPTOR, TAPERED ROLLER BEARING	1		
20	12	47289	WASHER, TAPERED ROLLER BEARING	1		
21	27	47290	GASKET, TAPERED ROLLER BEARING	1		
22		47304	RETAINER, TAPERED ROLLER BEARING	1		
23	11	47302	NUT, GEAR HOUSING TO DRIVE SHAFT HOUSING	1		
23	11	34933	NUT, GEAR HOUSING TO DRIVE SHAFT HOUSING	1		
24		48125A	COVER ASSEMBLY, FRONT - DRIVE SHAFT HOUSING	1	SERIAL 00000000-28105891	
24		58619A	COVER ASSEMBLY, FRONT - DRIVE SHAFT HOUSING	1	SERIAL 02815892-09999999	
25	26	48443	OIL SEAL, FRONT COVER	1		
26	25	20266	"O" RING, FRONT COVER	1		
27	27	48407	GASKET, FRONT COVER	1		
28	24	48442	SPRING, TENSION - OIL RELEASE	1		
29	20	48219	CHECK VALVE, OIL RELEASE	1		
30	25	48452	QUAD RING, OIL RELEASE CHECK VALVE	1		
31	10	47658	SCREW, FRONT COVER TO DRIVE SHAFT HOUSING	2		
32	13	47659	LOCKWASHER, FRONT COVER TO DRIVE SHAFT HOUSING	2		
33	11	34863	NUT, FRONT COVER STUD	7	SERIAL 00000000-30001963	
34		47212A	UNIVERSAL JOINT ASSEMBLY	1		