



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		93732A 6	AUTO TRIM ASSEMBLY	1		
2	11	45076	NUT, AUTO TRIM TERMINAL	8		
3	10	69067	SCREW, BLACK WIRE TO AUTO	1		
4	84	86322A22	WIRE ASSEMBLY (BLACK)	1		
5	13	78968	LOCKWASHER, WIRE SCREW	1		
6	11	64015	NUT, WIRE SCREW	1		
7	10	76502	SCREW, AUTO TRIM TO BRACKE	3		
8	23	42574	BUSHING, AUTO TRIM SCREW	6		
9	11	20190	NUT, AUTO TRIM SCREW	3		
10		805320A 2	TRIM SENDER ASSEMBLY	1		
11	85	63990	INSULATOR, TRIM SENDER	1		
12		79146	RETAINER	2		
13	79	99535A 2	GAUGE ASSEMBLY, AUTO TRIM	1		
14	88	72729	BULB	1		
15	88	79888	SOCKET, BULB	1		
16	12	26427	WASHER, GAUGE TERMINAL	2		
17	11	26419	NUT, GAUGE TERMINAL	5		
18		79480	BRACKET	2		
19	84	86322A 3	WIRE ASSEMBLY (BLACK)	1		
19	84	86323A 2	WIRE ASSEMBLY (PURPLE)	1		
20	84	88456A 3	HARNES ASSEMBLY, AUTO TR	1		
21		85218A 3	PLATE ASSEMBLY, SWITCH MOL	1		
22		76424	BRACKET, SWITCH MOUNTING	1		
23		49440	LOCKNUT, AUTO TRIM SWITCH	1		
24	16	55422	STUD, PLATE MOUNTING	2		
25	12	24676	WASHER, PLATE STUD	2		
26	11	68219	NUT, PLATE STUD	2		
27	54	95814	CLAMP, WIRING HARNESS CONI	1		
28	10	29227	SCREW, WIRING HARNESS CLAI	1		
29	11	34388	NUT, CLAMP SCREW	1		
30	84	95084A 9	WIRE ASSEMBLY, FUSE (LONG-F	1		
31	88	79091	FUSE (20 AMP.)	1		
32	84	95084A10	WIRE ASSEMBLY, FUSE (SHORT	1		
33	84	88974A 1	WIRE ASSEMBLY (BLACK)	1		
34	84	86322A 6	WIRE ASSEMBLY (BLACK)	1		