



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		14336A17	HYDRAULIC PUMP ASSEMBLY (F	1		
2	84	79147A 3	CONNECTOR AND HARNESS	1		
3	88	79091	FUSE (20 AMP.)	1		
4	84	95084A 2	WIRE, FUSE	1		
5		94279	BRACKET, MOUNTING - STARTE	1		
6	10	48060	SCREW, MOUNTING BRACKET T	2		
7	13	26992	LOCKWASHER, MOUNTING BRA	2		
8	23	96784	SPACER, MOUNTING BRACKET	1		
9	11	24656	NUT, MOUNTING BRACKET TO F	1		
10	89	96158T	SOLENOID, TRIM PUMP	2		
11	13	26995	LOCKWASHER, SOLENOID TERM	4		
12	11	26419	NUT, SOLENOID TERMINAL (8-3	4		
13	13	26992	LOCKWASHER, SOLENOID TERM	4		
14	11	94330	NUT, SOLENOID TERMINAL (1/4	4		
15	85	861680	BOOT, STARTER SOLENOID TEF	1		
16	10	41508	SCREW, STARTER SOLENOID TI	4		
17		94275	LINK, SOLENOID TO SOLENOID	1		
18	84	79139A12	BATTERY LEAD (POSITIVE)	1		
18	84	79138A 1	BATTERY LEAD (NEGATIVE)	1		
19	84	86322A15	WIRE, STARTER SOLENOID (BL/	2		
20	88	79023A10	FUSE ASSEMBLY (110 AMP.)	1		
21	12	96457	WASHER, FUSE TERMINAL	1		
22	13	26992	LOCKWASHER, FUSE TERMINAL	1		
23	11	21825	NUT, FUSE TERMINAL (1/4-28)	1		
24		862548A 1	BRACKET ASSY, MOUNTING - H	1	(FLOOR MOUNTED)	
25		58491	BUMPER, RUBBER - PUMP MO	2		
26	10	59784	SCREW, PUMP MOUNTING BR.	6		
27	12	29245	WASHER, PUMP MOUNTING B	6		
28	10	35386	SCREW, HYDRAULIC PUMP TC	4		
29	13	39107	LOCKWASHER, HYDRAULIC PL	4		
30	11	21908	NUT, HYDRAULIC PUMP SCRE	4		
31	10	48409	SCREW, BOOT ATTACHING	1		