



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	393	2799A 2	DISTRIBUTOR ASSEMBLY, COM	1	SERIAL 00000000-02210387	
-	393	2799A 9	DISTRIBUTOR ASSEMBLY, COM	1	SERIAL 02210388-09999999	
1	393	2799	HOUSING, PRIMARY	1		
2	13	26317	WASHER, WAVE - PRIMARY HO	2		
3	30	26379	BEARING, BALL - ROTOR SHAF	2		
4	53	45906	RING, RETAINER - ROTOR SHZ	2		
5	393	2921A 1	ROTOR SHAFT ASSEMBLY	1	SERIAL 00000000-02210387	
5	393	2921A 7	ROTOR SHAFT ASSEMBLY	1	SERIAL 02210388-09999999	
6	393	2795	SHIM, TRIGGER HOUSING TO I	AR		
7	393	2918A 1	TRIGGER HOUSING ASSEMBL	1		
8	10	20646	SCREW, SHIM AND TRIGGER I	2		
9	23	32914	SLEEVE, TRIGGER HOUSING	1		
10	393	3014A 2	ADAPTOR ASSEMBLY, HOUSIN	1		
11	27	46351	GASKET, ADAPTOR TO PRIM	1		
11	27	45910	GASKET, ADAPTOR TO PRIMAI	1		
12	17	20032	DOWEL PIN, ADAPTOR TO PRI	2		
13	10	32627	SCREW, ADAPTOR TO HOUSIN	2		
14	11	46438	NUT, ADAPTOR TO HOUSING	2		
15	22	31521A 1	ELBOW ASSEMBLY, VENT HOL	1		
16	27	36268	GASKET, DISTRIBUTOR TO AD	1		
17	393	1927A 9	DISTRIBUTOR CAP ASSEMBLY	1		
18	393	1293A 1	BRUSH AND SPRING ASSEM	1		
19	22	31521	ELBOW, VEN HOSE - DISTRIE	1		
20	10	45914	SCREW, DISTRIBUTOR CAP TO	4		
21	12	26436	WASHER, DISTRIBUTOR CAP F	4		
22	11	46438	NUT, DISTRIBUTOR CAP FAST	4		
23	393	2725	COVER, SIDE INLET - DISTRIB	1		
24	27	26447	GASKET, SIDE INLET COVER T	1		
25	10	45380	SCREW, SIDE INLET COVER TO	2		
26	393	2729A 1	HIGH TENSION CABLE ASSEMB	1		
--		20121	CONNECTOR, HIGH TENSION	1		
27	393	1275	SLEEVE, TERMINAL COVER	1		
28	25	26547	GROMMET, HIGH TENSION C	1		
29	332	2854	BOOT, HIGH TENSION CABLE	1		
27	393	1275	SLEEVE, TERMINAL END COVE	6		
28	25	26547	GROMMET, SPARK PLUG LEAD	12		
30		23564A 4	SPARK PLUG LEAD ASSEMBLY	3	ORDER A-36549A1 KIT FOR REF	
30		23564A 5	SPARK PLUG LEAD ASSEMBLY	2	ORDER A-36549A1 KIT FOR REF	
30		23564A 6	SPARK PLUG LEAD ASSEMBLY	1	ORDER A-36549A1 KIT FOR REF	
--		20121	CONNECTOR, SPARK PLUG LE	6		
31		20119A 1	PROTECTOR, SPARK PLUG LE	6		