



SEE PAGE 24 FOR DRIVE SHAFT
 AND COMPONENT PARTS

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2460A19	GEAR HOUSING ASSEMBLY, CO	1,		
-	1623	2460A18	GEAR HOUSING ASSEMBLY, CO	1,		
-	1623	2460A26	GEAR HOUSING ASSEMBLY, CO	,1,1		
-	1623	2460A27	GEAR HOUSING ASSEMBLY, CO	,1,1		
1	1623	2460A 4	GEAR HOUSING ASSEMBLY SE	1,		
1	1623	2460A20	GEAR HOUSING ASSEMBLY SE	,1,1		
53		36288	CAM, SHIFT	1,1,1		
54		30625	FOLLOWER, CAM	1,1,1		
55		30624	SLIDE, CROSS PIN	1,1,1		
56	24	30622	SPRING, COMPRESSION - CAM	1,1,1		
57	15	30923A 1	SHIM, BEARING OUTER RACE	AR,AR,		
--	43	34085A 1	FORWARD GEAR ASSEMBLY, (1,1,1		
58	43	34085	FORWARD GEAR ASSEMBLY	1,1,1		
59	31	30895	BEARING, ROLLER - FORWAR	1,1,1		
60	31	30894A 1	TAPERED ROLLER BEARING	1,1,1		
61	31	31092	CUP, TAPERED ROLLER BE	1,1,1		
62	52	34239	RATCHET, SLIDING CLUTCH	1,1,1		
63	17	30632	PIN, CROSS - RRATCHET TO P	1,1,1		
64	24	30893	SPRING, RETAINING - CROSS	1,1,1		
65	44	32164	SHAFT, PROPELLER	1,1,1		
--	43	31887A 1	REVERSE GEAR ASSEMBLY, C	1,1,1		
66	43	31887	REVERSE GEAR ASSEMBLY	1,1,1		
67	30	31265	BEARING, BALL - REVERSE C	1,1,1		
68	12	30633	WASHER, TRHUST - BEARIN	1,1,1		
69	15	29955A 1	SHIM, THRUST WASHER TO G	AR,AR,		
70	25	29976	"O" RING, BEARING CARRIER	1,1,1		2,4
71		31284A 1	BEARING CARRIER ASSEMBLY	1,1,1		
72	31	30956	BEARING, ROLLER - BEARIN	1,1,1		
73	26	30550	OIL SEAL, BEARING CARRIER	2,2,2		
74	28	30281	KEY, LOCATING - BEARING CA	1,1,1		
75	12	29957	WASHER, GEAR HOUSING CO	1,1,1		
76		31037	COVER, GEAR HOUSING	1,1,1		
77		31640A 1	TRIM TABE, GEAR HOUSING	1,1,1		
78	10	32470	SCREW, TRIM TAB TO GEAR H	1,1,1		
79	12	45176	WASHER, GEAR HOUSING TO	,2,2		
80	11	22178	NUT, GEAR HOUSING TO DRIVE	2,2,2		
81	12	31013	WASHER, THRUST - BEARING C	1,1,1		
82		30581A 1	THRUST HUB AND WASHER AS	1,1,1		
83	12	29590	WASHER, CUPPED - THRUST	1,1,1		
84	12	31211	WASHER, SPLINED - PROPELLER	1,1,1		
85	14	31210	TAP WASHER, PROPELLER NUT	1,1,1		