



10178

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1600	880686T28	GEAR HOUSING ASSEMBLY, Con	1	(Long)	
-	1600	880686T25	GEAR HOUSING ASSEMBLY, Con	1	(X-Long)	
1	1600	880687T01	GEAR HOUSING, Basic	1		
2		NSS	NOT SOLD SEPARATE, Plug	1		
3		892075	CRANK, Shifter	1		
4		19755T 7	SPOOL ASSEMBLY	1		
5		NSS	NOT SOLD SEPARATE, Spool	1		
6	18	46950 1	COTTER PIN	1		
7		NSS	NOT SOLD SEPARATE, Sleeve	1		
8	43	884337A02	GEAR ASSEMBLY, Reverse	1		
9	31	884323T01	BEARING ASSEMBLY, Roller	1		
10		NSS	NOT SOLD SEPARATE, Cup	1		
11	53	23721	RING, Retaining	1		
12	12	892805	THRUST WASHER	1		
13	31	884325T01	BEARING ASSEMBLY, Roller-T	1		
14		NSS	NOT SOLD SEPARATE, Cup	1		
15	15	884328A01	SHIM SET	AR		
16	24	30893	SPRING	1		
17	52	880714T	CLUTCH	1		
18	17	30632	PIN, Cross	1		
19	17	828356	PIN, Detent	1		
20	44	888530	PROPELLER SHAFT	1		
21	43	884335A01	GEAR ASSEMBLY, Forward	1		
22		880699	THRUST RING	1		
23	31	815480	BEARING, Thrust	1		
24		880696A10	BEARING CARRIER ASSEMBLY	1		
25	25	896524	O-RING, (3.850 x .210)	1		15
26	31	814653T	ROLLER BEARING	1		
27		880728	BEARING ADAPTOR	1		
28	15	47397A 1	SHIM SET	AR		
29	15	891936A01	SHIM SET	AR		
30	31	884330T01	BEARING ASSEMBLY, Tapper	1		
31		NSS	NOT SOLD SEPARATE, Cup	1		
32	26	896600	OIL SEAL	1		15
33	26	888483	OIL SEAL	1		15
34	10	880717A01	SCREW/SEAL KIT	1		
35	26	830749	SEAL	1		15
36		892818	ADAPTOR	1		
37	23	891919001	SPACER, Thrust	1		
38	14	880697	KEYED WASHER	1		
39		78448	RETAINER	1		