



8823

Parts List

| Ref | Class | Part | Description | Qty | Comment | Footnote |
|-----|-------|-----------|--------------------------|-----|---------|----------|
| 1 | | 880596T05 | FUEL SUPPLY MODULE | 1 | | |
| 1 | 84 | 880596521 | HARNES | 1 | | |
| 2 | 53 | 880596515 | CLIP | 1 | | |
| 3 | 25 | 855362001 | GROMMET | 3 | | |
| 4 | 23 | 855364 | BUSHING | 3 | | |
| 5 | | 880596T50 | COVER KIT | 1 | | |
| 6 | 10 | 880596513 | SCREW | 8 | | |
| 7 | | 880596503 | REGULATOR, With O-Rings | 1 | | |
| 8 | 54 | 880596512 | CLAMP | 2 | | |
| 9 | 32 | 880596511 | HOSE | 1 | | |
| 10 | | 880596522 | FLOAT | 1 | | |
| 11 | | 880596T55 | FUEL PUMP, High Pressure | 1 | | |
| 12 | | 880596506 | SEAL | 1 | | |
| 13 | 26 | 880596507 | SEAL | 1 | | |
| 14 | 26 | 880596510 | SEAL | 1 | | |
| 15 | | 880596T58 | FUEL PUMP KIT, Lift | 1 | | |
| 16 | | 880596509 | ISOLATOR | 1 | | |
| 17 | 26 | 880596502 | SEAL | 1 | | |
| 18 | | 880596T51 | HOUSING ASSEMBLY | 1 | | |
| 19 | 19 | 880596516 | PLUG | 1 | | |
| 20 | 25 | 880596517 | O-RING | 1 | | |
| - | 26 | 880596A01 | REPAIR KIT, Seal | 1 | | |
| - | | 889283A01 | TOOL KIT, Fuel Priming | 1 | | |