



1322

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		858366T 2	PLATE	1		
2	54	858755	CLIP, (1.00)	1		
3	89	817109A 2	SOLENOID ASSEMBLY, (10-32 .31)	1		
4	25	822179	GROMMET	2		
5	10	821291 25	SCREW, (M6 x 25)	5		
6	23	818968	BUSHING	2		
7		882751A 1	RELAY ASSEMBLY	3		
8		828102	BRACKET	3		
9	23	818968	BUSHING	3		
10	25	818967	GROMMET	3		
11	54	828991	CLIP	1		
12	12	29245	WASHER, (.281 x .500 x .060)	1		
13	11	45076	NUT, (#10-32)	2		
14	11	813938	CAPNUT, (#10-32)	1		
15	84	878231A 6	HARNESS ASSEMBLY, Fuse (100)	1		
16	84	882829A 1	CABLE ASSEMBLY, Starter	1		
17	13	53166	LOCKWASHER, (#10-32)	2		
18	11	68292	NUT, (#10-32)	2		
19	85	850067 1	BOOT, Insulator (Red)	1		
20	84	819514T18	TRIM HARNESS	1		
21		88555713S	PCM	1	(200) SN# 0T979999 & Below	
21		88555731S	PCM	1	(200) SN# 0T980000 & Up	
21		88555714S	PCM	1	(225) SN# 0T979999 & Below	
21		88555732S	PCM	1	(225) SN# 0T980000 & Up	
22	10	821300 25	SCREW, (M6 x 25)	3		
23	12	65567	WASHER, (.265 x .750 x .048)	3		
24	25	834985	GROMMET	3		
25	23	856954	BUSHING	3		
26		859088 1	CLIP	1		
27	10	821291 14	SCREW, (M6 x 14)	5		
28	84	878082T 8	ENGINE HARNESS	1		
29	88	832969 20	FUSE, Mini (Yellow - 20 Ampere)	4	(20 AMP)	
29	88	832969 5	FUSE, Mini (Tan - 5 Ampere)	1	(5 AMP)	
30		858754	COVER, Fuse	1		
-	84	858781A 2	HARNESS (DIRECT INJECTOR)	1		
-	84	858780A 2	HARNESS (FUEL INJECTOR)	1		
-	84	881262A 2	HARNESS END, Alternator	1		
-	84	878073A 2	HARNESS (TPS)	1		
31	54	816311T	CABLE TIE, (8.00 Inches)	AR		
32	10	821300 12	SCREW, (M6 x 12)	3		
33	10	818974 20	SCREW, (M4 x 20)	1		