
 


**Quicksilver Lubrication/Sealant Application Points**

-  Loctite 35 (92-59328-1)
-  Loctite Master Gasket (92-12564-1)

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
32	1034	9003A 2	COVER ASSEMBLY	1		2
33	27	43005 7	GASKET	1		4,2
34	22	32802 1	PIPE PLUG	1		
35		823462	LIFTING EYE	1		
36		14586	THERMOSTAT	1		2
37	27	62386	GASKET	1		4,2
38	27	43006 5	GASKET	1		4,2
39		42885 3	COVER	1		2
40	10	12896	SCREW-AIR VENT HOLE	1		
41	10	821273 35	SCREW (35 MM)	5		2
42	10	69570	SCREW	1		2
43	12	94182	WASHER	1		2
44		64877	DIAPHRAGM	1		2
45	10	48409	SCREW	2		
46	12	56681	WASHER	1		
47		44290	RETAINER	1		
48		78799	TEMPERATURE SENDER	1	(ELECTRIC)	
48		78799 2	TEMPERATURE SENDER	1	(MANUAL)	
49	10	821273 35	SCREW	14		2
50	54	814634	CLAMP	4		2
51		99162	BOOT	1		
52		14857A15	OIL WARNING MODULE	1		1
53		821889A31	REV LIMITER	1	(NON OIL INJECTION)	
54	10	821300 50	SCREW (M6 X 1 X 50)	2		
54	10	40106 30	SCREW (M6 X 1 X 30)	2		
55	12	29245	WASHER	2		
56	84	823147A 6	HARNES-SPEED LIMITER	1	(NON OIL INJECTION)	
57	84	11149A 8	HARNES ADAPTOR	1		
-	27	43004A90	GASKET SET	1		
-		<a href="#">809837A97</a>	POWERHEAD	1		1