



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		92975A 6	HYDRAULIC PUMP ASS'Y	1	(PLASTIC RESERVOIR) SEE NO	
2	25	48171	"O" RING, MANIFOLD PLATE	4		
3	10	79953	SCREW, FILLER - HYDRAULIC	1		
4	12	20260	WASHER, SEALING - FILLER S	1		
5	10	38257	SCREW, VENT - HYDRAULIC PI	1		
6		45336	PLATE, MANIFOLD	1		
7		45197A 2	CONTROL VALVE ASSEMBLY	1		
--	25	48171	"O" RING, MANIFOLD PLATE (S	4		
8	25	45254	"O" RING, CONTROL VALVE (3-	1		
9	25	48171	"O" RING, CONTROL VALVE (1-	1		
10	25	45253	"O" RING, CONTROL VALVE (5-	2		
11	10	56500	SCREW	4	VALVE AND MANIFOLD PLATE 1	
12	22	46008	PLUG, CONTROL VALVE (1/2-20"	2		
13	84	79147A 1	CONNECTOR AND HARNESS	1		
14		45377	BRACKET, MOUNTING	2		
15	10	24234	SCREW	4	MOUNTING BRACKET TO HYDF	
16	13	39107	LOCKWASHER, MOUNTING BRA	4		
17	11	21908	NUT, MOUNTING BRACKET SCR	4		
18	10	68298	BOLT, HYDRAULIC PUMP TO BO.	2		
19	11	99405	NUT, HYDRAULIC PUMP BOLT	2		
20		94279	BRACKET, MOUNTING - STARTE	1		
21	10	48063	SCREW	2	MOUNTING BRACKET TO HYDF	
22	11	24656	NUT	1	MOUNTING BRACKET TO HYDF	
23	89	96158	STARTER SOLENOID	2		
24	13	26995	LOCKWASHER, SOLENOID TERN	4		
25	11	26419	NUT, SOLENOID TERMINAL (8-32	4		
26	13	26992	LOCKWASHER, SOLENOID TERN	4		
27	11	94330	NUT, SOLENOID TERMINAL (1/4-	4		
28	85	96535	BOOT, RUBBER - STARTER SOLI	4		
29	10	91026	SCREW	2	STARTER SOLENOID TO MOUN	
30		94275	LINK, SOLENOID TO SOLENOID	1		
31	84	79139A13	BATTERY LEAD (POSITIVE)	1		
31	84	79138A 1	BATTERY LEAD (NEGATIVE)	1		
32	88	79149	CIRCUIT BREAKER (20AMP.)	1		
33	10	30009	SCREW, CIRCUIT BREAKER	2		
34	11	45076	NUT, CIRCUIT BREAKER TERMIN	2		
35	84	87379A 5	WIRE, SOLENOID TO CIRCUIT B	1		
36	88	79023A90	FUSE ASSEMBLY (90 AMP.)	1		
37	12	96457	WASHER, FUSE TERMINAL	1		
38	11	21825	NUT, FUSE TERMINAL (1/4-28)	1		
39	84	61600A 9	WIRE, STARTER SOLENOID (PL	2		