



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1655	7333A24	GEAR HOUSING ASSY, COMP(S	1		
1	1655	7333A23	GEAR HOUSING ASSY	1		
1A	22	85822A 1	CONNECTOR ASSEMBLY, SP	1		
2	17	46912	DOWEL PIN, GEAR HOUSING	2		
3	16	57921	STUD	1	GEAR HOUSING TO DRIVE SHA	
4	16	57920	STUD	2	GEAR HOUSING TO DRIVE SHA	
5	16	56297	STUD	1	WATER PUMP BASE AND BODY	
6	16	30667	STUD	2	WATER PUMP BASE AND BODY	
7	31	32898	BEARING, ROLLER - DRIVE S	1		
8	45	42646	DRIVE SHAFT	1		
9	43	68548	GEAR, PINION - DRIVE SHAFT	1		
10	11	35921	NUT, PINION GEAR TO DRIVE :	1		
11	23	70412	SPACER, BALL BEARING TO B/	1		
11	15	57007A 1	SHIM, BALL BEARING TO BASE	AR		5
12	31	69220	ROLLER BEARING, DRIVE SHA	1		
14	27	33146	GASKET, WATER PUMP BASE	1		4
15	25	33145	"O" RING, WATER PUMP BASE	1		4
16	46	73804A 1	WATER PUMP BASE ASSEMBL	1		
17	26	31489	OIL SEAL, WATER PUMP BAS	1		
18	26	31507	OIL SEAL, WATER PUMP BAS	1		
19	17	35973	DOWEL PIN	2	WATER PUMP BASE TO WATER	
20	27	32433	GASKET	1	LOWER - WATER PUMP BASE T	4
21		32435	PLATE	1	FACE - WATER PUMP BASE TO	
22	27	32434	GASKET	1	UPPER - FACE PLATE TO WATE	4
23	46	64141A 1	WATER PUMP BODY ASSEMBL	1		
24		48752	INSERT, WATER PUMP BOD	1		
26	26	38970	SEAL, RUBBER - WATER INLI	1		
27	47	65960	IMPELLER, WATER PUMP	1		
28	28	56654	KEY, IMPELLER DRIVE	1		
29	10	30720	SCREW	1	WATER PUMP BODY TO GEAR	
30	13	26992	LOCKWASHER, WATER PUMP	1		
31	12	29245	WASHER	3	WATER PUMP BODY FASTENIN	
32	11	35888	NUT, WATER PUMP FASTENIN	2		
33	12	36001	WASHER, WATER PUMP BOD	1		
35	25	30271	RING, RUBBER	1	CENTRIFUGAL SLINGER (DRIVE	4
36	23	29804	SLEEVE, GUIDE - WATER INLE	1		
37		37641	SEAL, EXHAUST ELBOW	1		
38		38051	PLATE, SUPPORT - EXHAUST	1		
39		76062A 1	SHAFT ASSEMBLY, SHIFT - LO	1		
40	53	29641	"E" RING, RETAINING - SHIF	1		
41	25	25429	"O" RING, SHIFT SHAFT PUSH	1		4