



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	837046	1	Injection pump		
2	240909	1	· Governor		
				02C-0750	
3	240072	1			REPL BY 243083
				02C-0850	
	243083	1	· Feed pump		
				02C-0850	
4		1	· PUMP HOUSING		
5	239982	6	· Tappet		
6	240779	6	· · Bolt		
7	240780	6	· · Bushing		
8	240781	6	· · Roller		
9	238379	6	· · Plate		
10	239986	6	· Spring disc		
11	244065	6	· Spring		(239985)
12	239984	6	· Spring disc		
13	240782	6	· Control sleeve		
14	239991	6	· Cover		
15	239990	6	· Lock ring		
16	240003	6	· Spacer ring		
17	240002	6	· O-ring		
18	240424	X	· Gasket		TH = 0,15 MM
	240004	X	· Gasket		TH = 0,40 MM
	240005	X	· Gasket		TH = 0,50 MM
	240006	X	· Gasket		TH = 0,60 MM
	240007	X	· Gasket		TH = 0,70 MM
	240008	X	· Gasket		TH = 0,80 MM
19	243741	6	· Bushing		
20	241677	6	· Washer		
21	240422	12	· O-ring		
22	239988	6	· Pump element		
23	240783	6	· Delivery valve		
24	239993	6	· Gasket		
25	238309	6	· Spring		
26	240001	6	· Gasket		
27	243771	6	· Delivery valve retai		
28	243743	12	· Washer		
29	240010	12	· Screw		
30	941908	12	· Spring washer		
31	955783	12	· Nut		
32	240011	1	· Cover		
33	956209	2	· Screw		
34	18891	2	· Lock washer		
35	240425	1	· Control rod		
36	240014	2	· Guide sleeve		
37	244008	1	· Lock pin		(837734)
38	240015	1	· Bushing		
39	240971	6	· Plug		
40	238312	X	· Adjusting washer		TH = 0,30 MM
	241734	X	· Adjusting washer		TH = 0,50 MM
	238314	X	· Adjusting washer		TH = 1,00 MM
41	837735	6	· Plug		
42	18836	6	· Gasket		
43	243263	1	· Plug		
44	240017	1	· Gasket		
45	240789	1	· Camshaft		
46	240426	1	· Bearing		
47	240427	2	· Screw		
48	941906	2	· Spring washer		
49	240023	2	· Roller bearing		
50	240022	1	· Sealing ring		
51	243299	1	· O-ring		
52	240024	X	· Adjusting washer		TH = 0,10 MM
	240025	X	· Adjusting washer		TH = 0,12 MM

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
52	240026	X	· Adjusting washer		TH = 0,14 MM
	240027	X	· Adjusting washer		TH = 0,16 MM
	240028	X	· Adjusting washer		TH = 0,18 MM
	240029	X	· Adjusting washer		TH = 0,30 MM
	240030	X	· Adjusting washer		TH = 0,50 MM
53	240021	1	· Cover		
54	956094	4	· Screw		
55	941906	4	· Spring washer		
56	955806	1	· Nut		
57	941913	1	· Spring washer		
58	35168	1	· Key		
59	240032	1	· Ring		
60	240033	X	· Adjusting washer		TH = 1,20 MM
	240034	X	· Adjusting washer		TH = 1,50 MM
	240035	X	· Adjusting washer		TH = 1,80 MM
	240036	X	· Adjusting washer		TH = 2,00 MM
61	240947	1	· Cover		
62	240948	1	· Gasket		
63	956205	12	· Screw		
64	239896	1	· Gasket		
65	130673	3	· Stud		
66	955781	3	· Nut		
67	941906	3	· Spring washer		
68	241647	1	· Setting indicator		
69	100101	2	· Screw		
70	941906	2	· Spring washer		